

R&S®NRQ6

Frequency Selective Power Sensors

Installation Instructions



1421471102

Installing the License Key

Use one of the following methods:

- Entering the license key manually.
See "[To install the license key](#)" on page 2.
- Using an RSI file.
See "[To install the license key](#)" on page 2.
- Using remote control.
SYSTem:LIcense: . . . commands; for details, see the user manual.

To install the license key

1. Make sure that the most recent firmware version is installed.
2. Open the web user interface.
3. In the navigation pane of the main dialog, select "System".
4. Click "Enter License Key".
The "Enter License Key" dialog is displayed.
5. If you install the license key manually:
 - a) Under "License Key", enter the license key from the software option list supplied with the option.
6. If you use an RSI file:
 - a) Copy the RSI file delivered with the option into a folder that you can access with your R&S NRQ6.
 - b) Click "Browse License File".
 - c) Select the RSI file you want to install.
7. Click "Apply".
8. Click "Reboot".
The R&S NRQ6 performs a reboot.
9. Check whether the option is active. The name of the option is displayed under "Installed Options", for example "NRQ-K1".

If you need further information on this or related topics, see the user manual of the R&S NRQ6.



北京海洋兴业科技股份有限公司 (证券代码: 839145)

北京市西三旗东黄平路19号龙旗广场4号楼 (E座) 906室

电话: 010-62176775 62178811 62176785

企业QQ: 800057747 维修QQ: 508005118

企业官网: www.hyxyq.com

邮编: 100096

传真: 010-62176619

邮箱: market@oitek.com.cn

购线网: www.gooxian.com



扫描二维码关注我们
查找微信公众号: 海洋仪器